

# Instruction Manual Betzold Period Timer "Timello"

Nr./Art. 760945

**IMPORTANT – PLEASE READ INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

## Warning notice for a safe and correct method of use

- ▶ Normal batteries are not rechargeable! Replace used batteries with new ones.
- ▶ Do not keep used batteries in the battery holder for a longer period of time.
- ▶ Please take care to match the right polarities!
- ▶ Do not expose batteries to fire or high temperatures!

Batteries are not included.

## Notes for disposal

Please dispose of all packaging material immediately after unpacking in an environmentally-friendly fashion. Plastic wrappings represent a danger of suffocation for small children. Please dispose of the used article according to local ordinance regulations.

## Notes for disposal of batteries

Used batteries are not to be disposed of with household waste. Consumers are legally obligated to return batteries to the appropriate collecting points. They can also be taken to any place where they are sold. Used batteries contain valuable resources, which can be recycled.

The sign with the crossed out waste container means, that batteries and rechargeable batteries are not to be disposed of in household waste.



The symbols below the waste container mean:

Pb: The battery contains lead

Cd: The battery contains cadmium

Hg: The battery contains mercury

## Guarantee

In addition to the legal guarantee (and without reducing it) you receive 2 years of total guarantee. That means, you do not have to prove that articles were already damaged at purchase. In case of guarantee, contact place of purchase.

### **D**

Arnulf Betzold GmbH  
Ferdinand-Porsche-Str. 6  
73479 Ellwangen

Telefon: +49 7961 - 9000 - 0  
Telefax: +49 7961 - 9000 - 50  
E-Mail: [service@betzold.de](mailto:service@betzold.de)  
[www.betzold.de](http://www.betzold.de)

### **AT**

Arnulf Betzold GmbH  
Seebühel 1  
6233 Kramsach/Tirol

Telefon: +43 5337 - 644 - 50  
Telefax: +43 5337 - 644 - 59  
E-Mail: [service@betzold.at](mailto:service@betzold.at)  
[www.betzold.at](http://www.betzold.at)

### **CH**

Betzold Lernmedien GmbH  
Winkelriedstrasse 82  
8203 Schaffhausen

Telefon: +41 52 - 64480 - 90  
Telefax: +41 52 - 64480 - 95  
E-Mail: [service@betzold.ch](mailto:service@betzold.ch)  
[www.betzold.ch](http://www.betzold.ch)



# Instruction Manual Betzold Period Timer "Timello"


Nr./Art. 760945

**IMPORTANT – PLEASE READ INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

## Main feature

1. LCD count-down timer.
2. 4 digits display showing minute ("M" mark) and second ("S" mark).
3. Timing range: 1-99'59"
4. Buzzing output when timer counts down at last second.
5. Timer memory recall function.
6. [MIN], [SEC] individual buttons for minute and second setting.
7. Clockwise function.

## Product shows

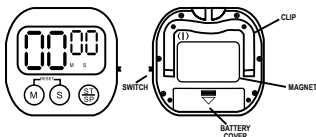

## Timing setting

1. Press [MIN] button to advance minute digits (deep sound can be heard). Press and hold [MIN] button for speed setting.
2. Press [SEC] button to advance second digits (deep sound can be heard). Press and hold [SEC] button for speed setting.
3. Press [MIN] and [SEC] button at the same time to reset timer to zero.

## Timer START/STOP

1. After time setting is ready, press [START/STOP] button once and timer will start to count down. "M" and "S" marks will flash when timer is counting.
2. Press [START/STOP] button once and timer will stop. "M" and "S" marks will stop flashing.
3. Press [START/STOP] button once and timer will resume counting again.
4. After buzzing stop, press [START/STOP] button once can return to last setting time.

## Timer Buzzer Alarm

1. When timer counts down to 00<sup>M</sup>00<sup>S</sup>, timer buzzing will sound for 30 seconds.
2. Buzzing can be stopped by pressing any button.

## Timer Memory Recall

After buzzing stops, press [START/STOP] button once to recall pre-set time and timer will count down for another lap.

## Clockwise Function

Press [MIN] and [SEC] button at the same time, when display shows 00<sup>M</sup>00<sup>S</sup>.

Press [START/STOP] button once going to clockwise

## Battery Replacement

Follow the arrow direction to open the battery cover at back side of timer.

Remove old battery, insert a new micro battery type AAA (LR03) as indicated by the polarity symbols (+ & -) marked and close battery cover.

## Clip Attachement

The timer can clip on thin board or shirt pocket, using the plastic clip at rear of timer. The timer can attach to iron or steel surface, using the magnet at rear of timer. The timer can stand on table surface, flip out the metal stand bar at rear of timer.

## Timer Switch ON/OFF

When not using the timer, press the switch to off. Timer can shutdown, enter the power saving mode.

**Betzold**